




ILLUSTRATION B

ILLUSTRATION C

ILLUSTRATION A

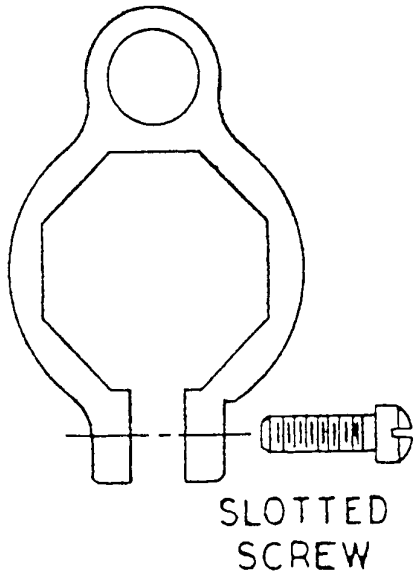

ROPE GUIDE

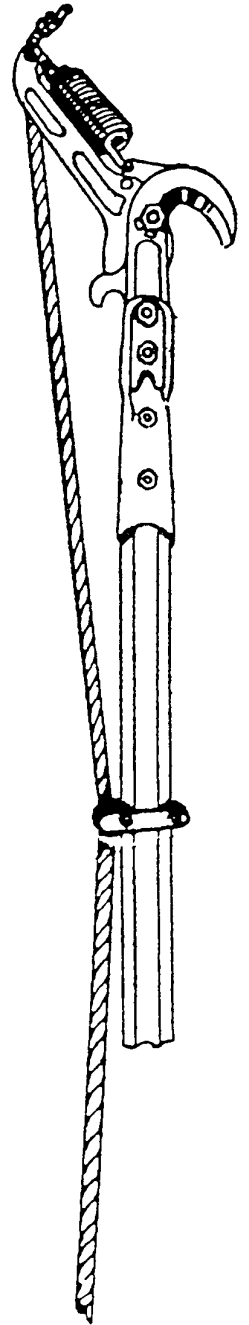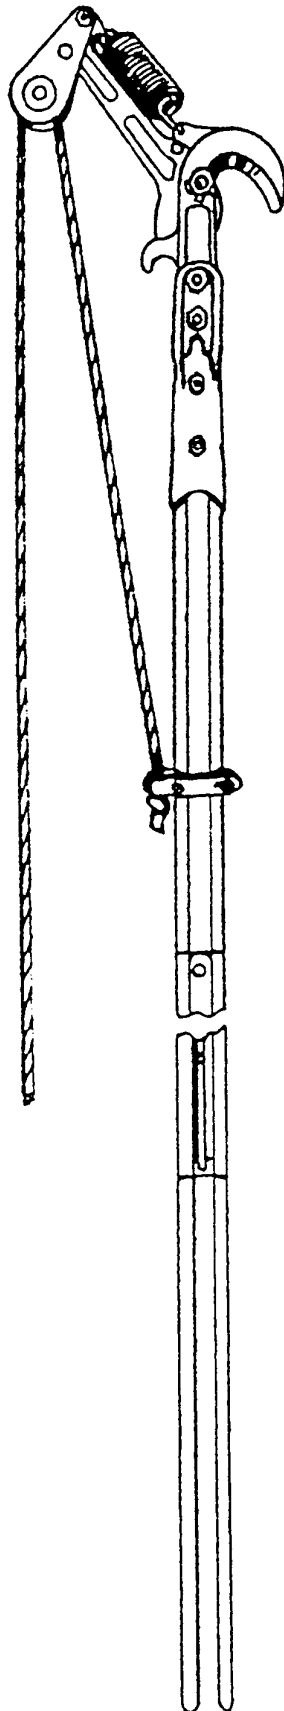

How to Assemble Your P-F Pole Pruner

See Illustrations on Reverse Side

1. Slide Rope Guide¹ over tapered end of pole until it is 18" from top end, and insert slotted screw into Rope Guide holes. See Illustration A. Do not tighten Rope Guide Screw yet.
2. Push cutterhead onto tapered end of pole, making sure the two holes in cutterhead brackets line up with the holes in tapered section of pole. CAREFUL- Blades are sharp!
3. Insert shorter bolt in top hole of bracket and longer bolt in bottom bracket hole. Make sure square shoulders under boltheads are fitted into square holes on cutterhead bracket. Attach washer and nut to each bolt and tighten.
4. Line up small hole in Rope Guide so it is directly in line with outer hole in straight blade of cutterhead. Tighten Rope Guide screw firmly so Guide cannot slide up under pressure.
5. If Pruner Cutterhead has a Pulley attached, feed end of Rope through Pulley ;and down through hole in Rope Guide. Tie a good firm knot in end of rope so it cannot pull through Rope Guide hole. Illustration B.

If Pruner Cutterhead does not have a Pulley attached, feed end of Rope up through Rope Guide hole and through hole at outer end of straight blade on Cutterhead. Tie a good firm knot in end of Rope so it cannot pull through blade hole. Illustration C.

6. If you purchased a ten or twelve foot solid pole pruner, you are now ready to use your new pruner.
7. If you purchased a two or three sectional pole pruner, attach the lower section by sliding onto the top section. Lift the small flat arm on the lower section out of the sleeve just far enough to let the top section fit in so the two holes line up. The round button on the arm will then fit into the two holes, locking the two sections of pole together.

You have purchased a quality, professional type Pole Pruner which will give you years of pleasure and service if used correctly.

Thank you,

Porter-Ferguson

CAUTION - Do not cut wire, bolts or any metal with this pruner. Better warn your borrowing neighbors and friends, too.

(See Over)
No. 10798 2/70

¹ Rope and rope guides are not provided with model 0799QP and model 0799RP.